

installation guide



# DT2

Vibration damping tile

meegasorber®

# DT2

These recommendations are for general guidance only. Installation methods must be tested under actual service conditions to determine their suitability for a particular purpose.



**Clean substrate surface** with Megasorber AC5, acetone or similar.


The surface must be dry, free of oil, dust, grease, rust and other contaminants.



**Install the damping tile**, peel off the release liner on the back of the damping tile and apply the tile onto the substrate.

After the initial contact, apply firm hand pressure or use a roller to push the damping tile onto the substrate. The damping tile must be in full contact with the substrate and free of any trapped air bubbles.

*Megasorber A200 adhesive / sealant is recommend to seal the edges of the tiles, and to fill the gaps between the tiles if needed.*

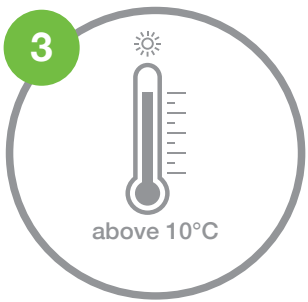

**Recommended application temperature above 10°C**



Tiles to be installed in overhead position, we recommended using Megasorber A200 adhesive along the edges to provide extra support. Alternately, mechanical fixing method such as small screws is recommended on the corners and the centre of the tiles.

If the tile needs to be re-positioned, it must be done within 24 hours after installation. The damping tiles will reach their full bond strength after 24 hours.